


NOZZLE PATTERN WIDTH

Blast patterns are determined by: 1/8 distance from work area plus the diameter of the nozzle.

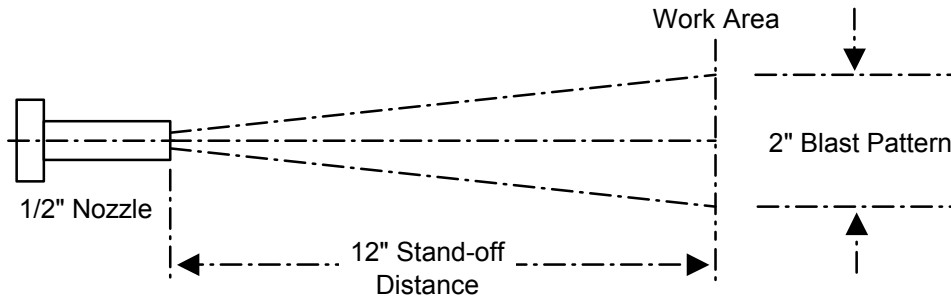

EXAMPLE:

12" distance away from work area:

$$\frac{1}{8} \times 12" + \frac{1}{2}" = 1\frac{1}{2}" + \frac{1}{2}" = 2"$$

SELECTION OF BLAST HOSE SIZE

Nozzle area to hose area should be ratio 1 to 9.

Example: 5/16" nozzle area .0767 sq. in.

Hose area should be .0767 x 9 or .6903 sq. in. or 1" hose next commercial size.

NOZZLE DIAMETER

HOSE ID

1/8" bore	3/8"
5/32" bore	1/2"
3/16" bore	1/2"
1/4" bore	3/4"
5/16" bore	1"
3/8" bore	1" to 1-1/4"
7/16" bore	1-1/4"
1/2" bore	1-1/4" to 1-1/2"
Three nozzles 1/4"	1-1/4"
Three nozzles 5/16"	1-1/2"